



PERFORMANCE BY
**INTEGRATED
ENGINEERING**

Integrated Engineering's Audi B9/B9.5 A4 & A5 2.0T Polymer Air Intake Install Guide
IE Part Number: IEINCK6

Thank you for purchasing another high quality Integrated Engineering product! This instruction guide is used for installation of Integrated Engineering's Polymer Air Intake System compatible with the Audi B9/B9.5 A4 & A5 2.0T engines. This kit needs to be installed by a professional or an experienced technician. Integrated Engineering is not responsible for any damage caused by incorrect installation.



Before you begin, *open your IE Intake and inspect all components, and verify quantities. Some items may be partially assembled.*

Kit Contents:

- (1) B9 A4 Rotomolded Intake
- (1) B9 A4 Rotomolded Intake Sheet Metal Access Plate
- (1) IE AIR FILTER FOR INTAKE KITS
- (1) LASER MARKED LOGO TAG (1" X3")
- (1) IE Intake Kit Bellmouth, 3.5" Inlet to 5" Filter, black wrinkle
 - (2) Metric 18-8 SS Socket Head Cap Screw M6 Thread, 65mm Length, 1mm Pitch
 - (9) Torx Plus Rounded Head Thread-Forming Screws Black-Oxide 18-8 Stainless Steel, Number 4 Size, 1/4" Long
 - (7) 18-8 Stainless Steel Button-Head Socket Cap Screw, M5 size
 - (2) Metric DIN 125 18-8 SS Flat Washer M6 Screw Size, 12mm OD, 1.4mm-1.8mm Thick

Required Tools:

- Torx 25 bit
- 5mm Allan
- Flat Head Screwdriver

Park your vehicle in a safe and level location. Allow plenty of time for the engine bay to completely cool before beginning the installation procedure. Unbox your IE intake kit to verify the contents and quantities and check for any possible shipping damage. Prepare your work space and locate the required tools listed above before starting.

We highly recommend pre-reading the entire installation guide ahead of your install to both prepare yourself for each step and to make sure you don't have any questions before beginning. If you have any questions or need clarification, please contact our helpful horsepower specialists at support@performancebyie.com



Remove the hood latch by pressing the top release tab while pulling upwards




Lift up the corner of the bumper cover then run your fingers along the edge to release the locating tabs




Once the locating tabs have been released, pull forward to slide out from radiator support.



Remove two T25 screws from the air inlet

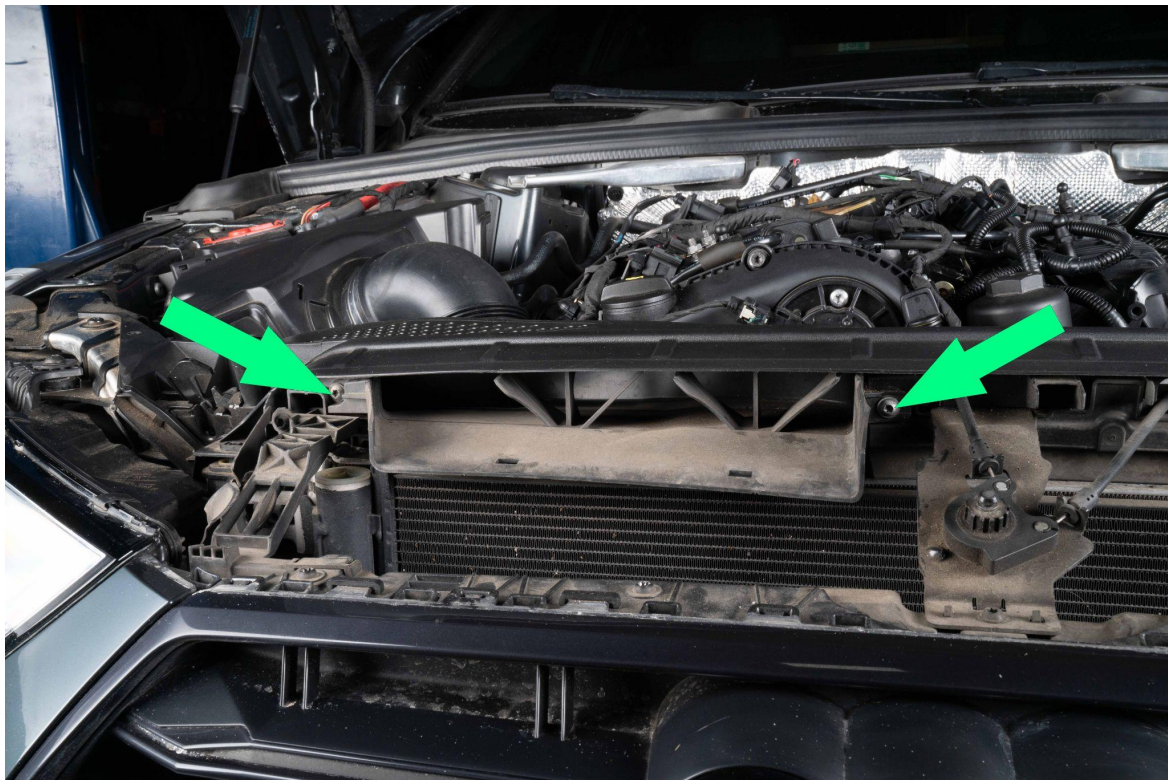

Remove the air inlet from the engine bay

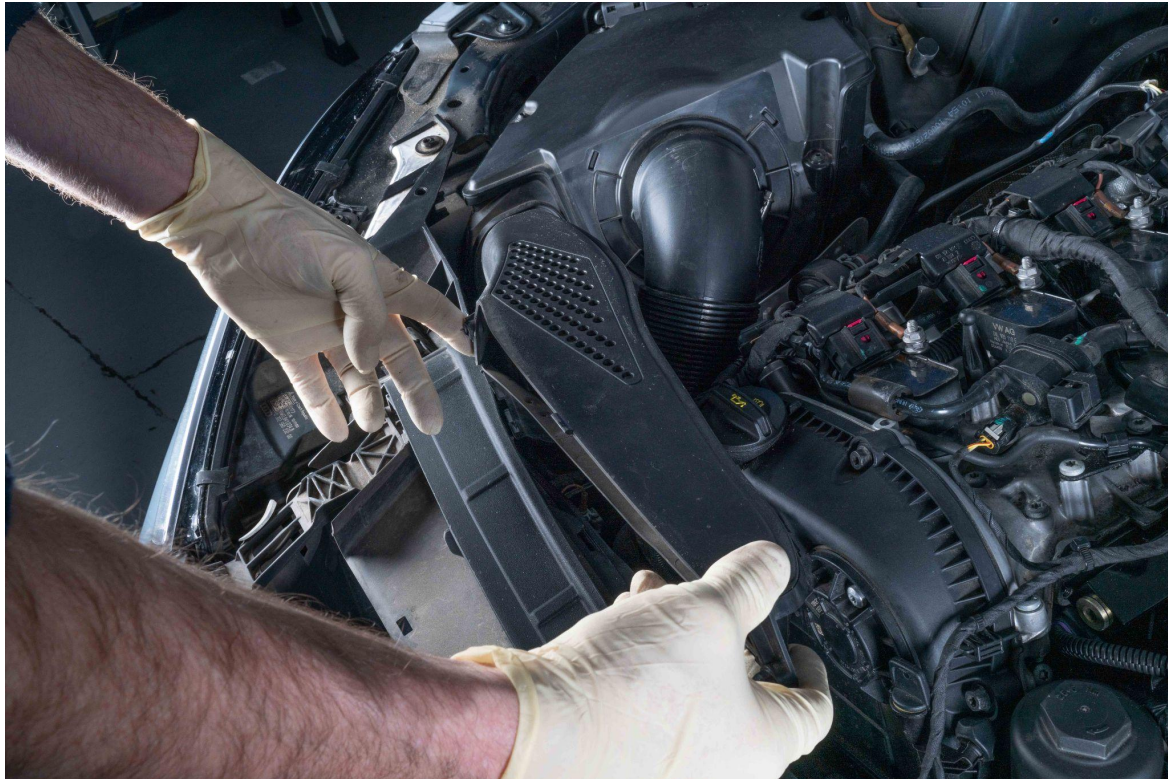

Loosen hose clamp from the hose connecting to the air box



Detach intake hose from airbox by pulling away




Remove air box from engine bay by pulling up and out



Lower your new IE intake into the engine bay



Loosely Install the two T25 bolts and washers, placing the washer on the back side of the radiator support and between intake

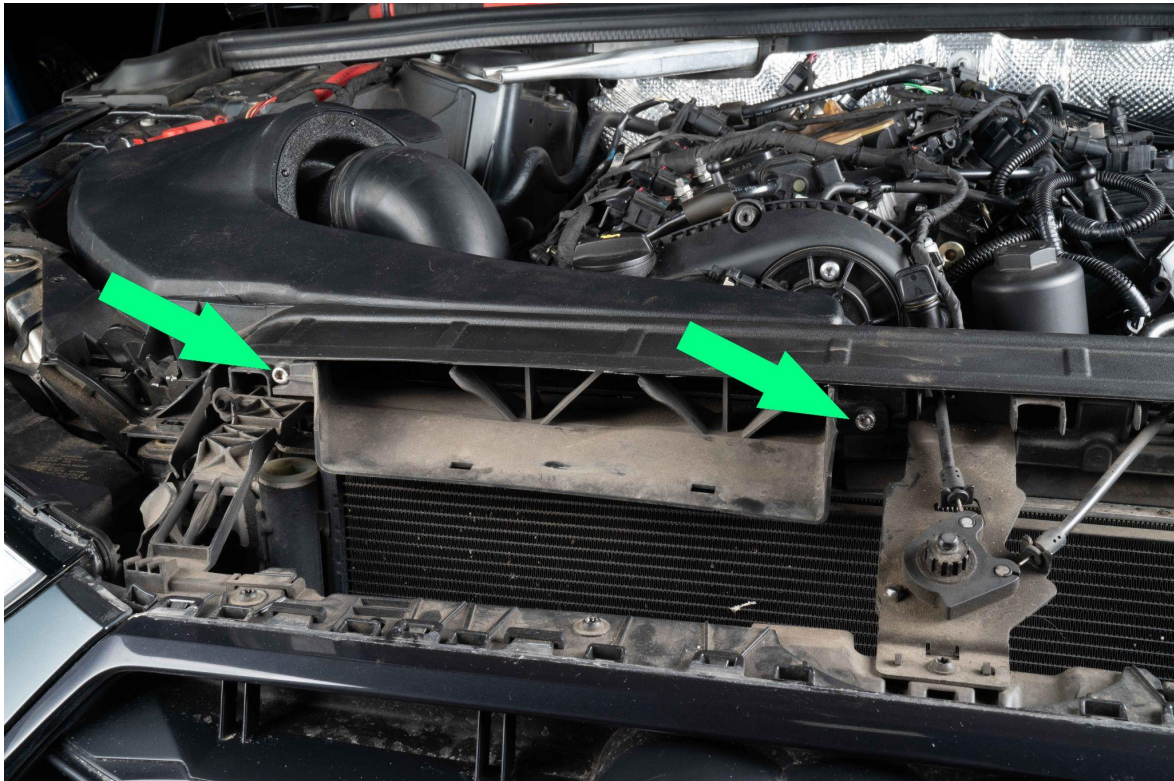





Attach intake hose to the air intake



Install and tighten the band clamp connecting the hose and intake

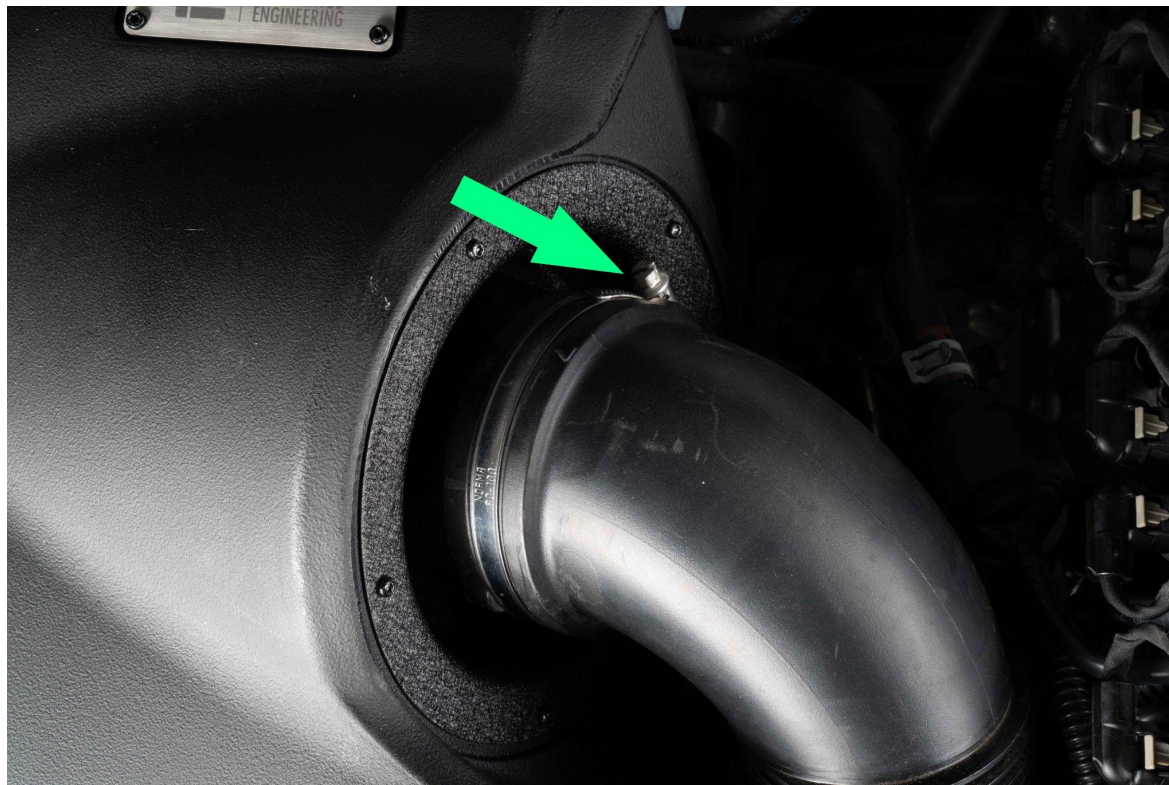


Tighten both mounting T25 bolts. Take care to only hand tighten. Overtightening can cause the threads to be pulled from the airbox.

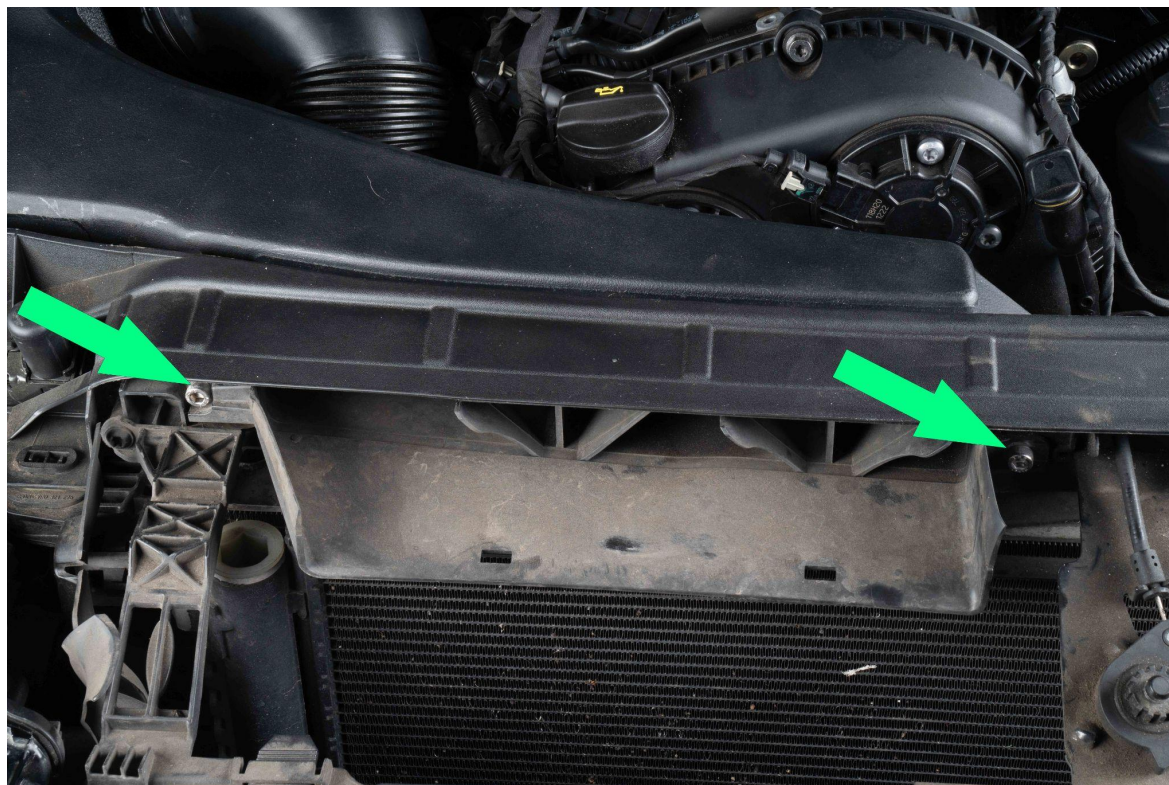

Reinstall the radiator cover back into place and press down the locating tabs



Reinstall the hood release lever to cover by matching up the notches. Press down until you hear a *Click*

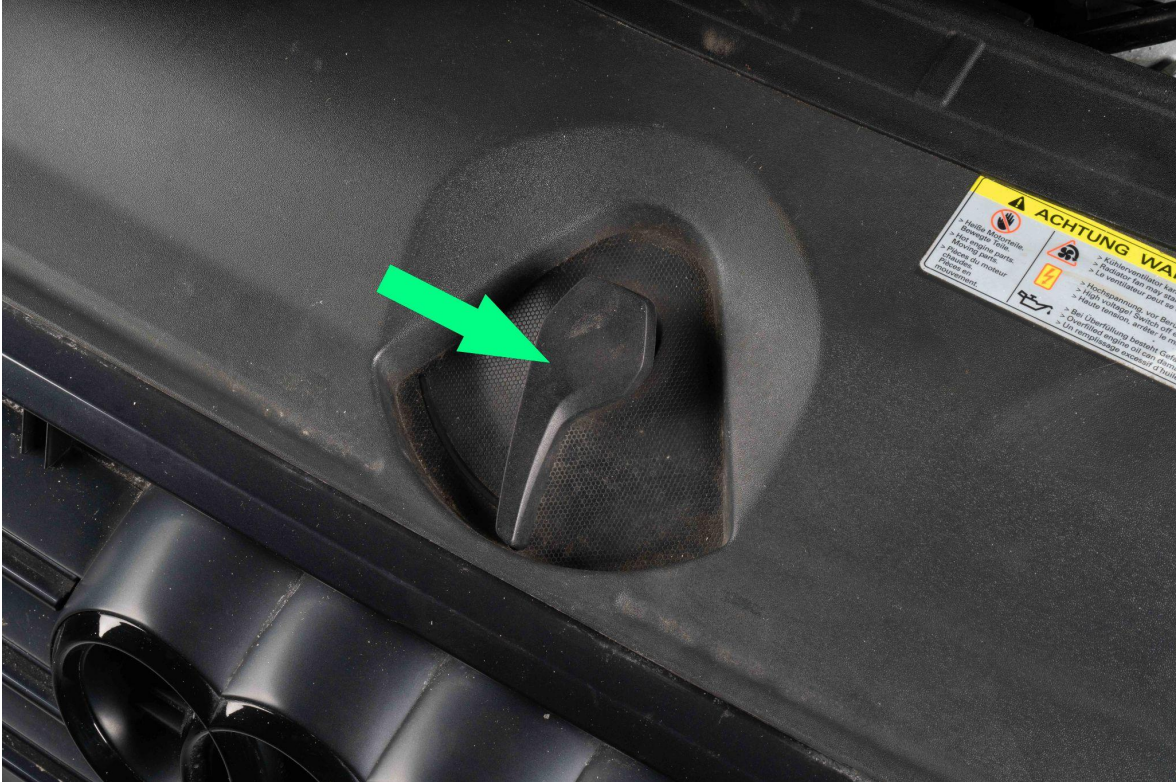

Enjoy the look, sound, and performance of your new premium air intake!



Thank you for purchasing another Integrated Engineering product. We are dedicated to serving your VW/Audi engine and performance needs. Please check our website frequently for new product releases. If you have any questions or concerns about this product please do not hesitate to contact us.

PERFORMANCE BY



Integrated Engineering
801.484.2021
sales@performancebyie.com
www.performancebyie.com