

PERFORMANCE BY



INSTALLATION GUIDE

POLY LID FOR VOLKSWAGEN GOLF MK8 INTAKE

IEINDB6



This installation guide is for instructional purposes only. For best results, professional installation by an experienced technician is always recommended. By reading this guide you agree Integrated Engineering is not responsible for any damage or personal injury caused by incorrect installation.

DIFFICULTY



Expect 15-20 minutes on average

REQUIRED TOOLS

- 2.5mm Allen Key
- 3mm Allen Key
- 4mm Allen Key
- Magnet Stick (for handling small hardware)

BEFORE YOU BEGIN

It is highly recommended to pre-read this entire guide ahead of your installation to familiarize yourself with each step. Always park your vehicle in a safe and level location and allow plenty of time for the engine bay and exhaust to completely cool. Locate and prepare your work space with each required tool listed above. Unbox all components and verify the contents and quantities before you begin. If anything is missing or damaged, please contact us for immediate help at support@performancebyie.com

SPECIAL NOTE:

This install guide has been photographed and written on a 2023 MK8 GTI. Some steps and factory hardware specifications may vary depending on vehicle model, year, and region. This guide is for reference purposes only. If you are unsure of the installation procedure for any individual step or part, please seek professional help before proceeding.



INCLUDED PARTS


- 01 – M4 BUTTON HEAD BOLT 8MM LONG (6X)
- 02 – M4 WASHER, 4.3MM ID, 9MM OD (6X)
- 03 – M6 FLAT WASHER, 12MM OD (1X)
- 04 – M6 SOCKET HEAD BOLT 12MM LONG (1X)
- 05 – MK8 POLY INTAKE LID



Some items may be partially assembled.




01

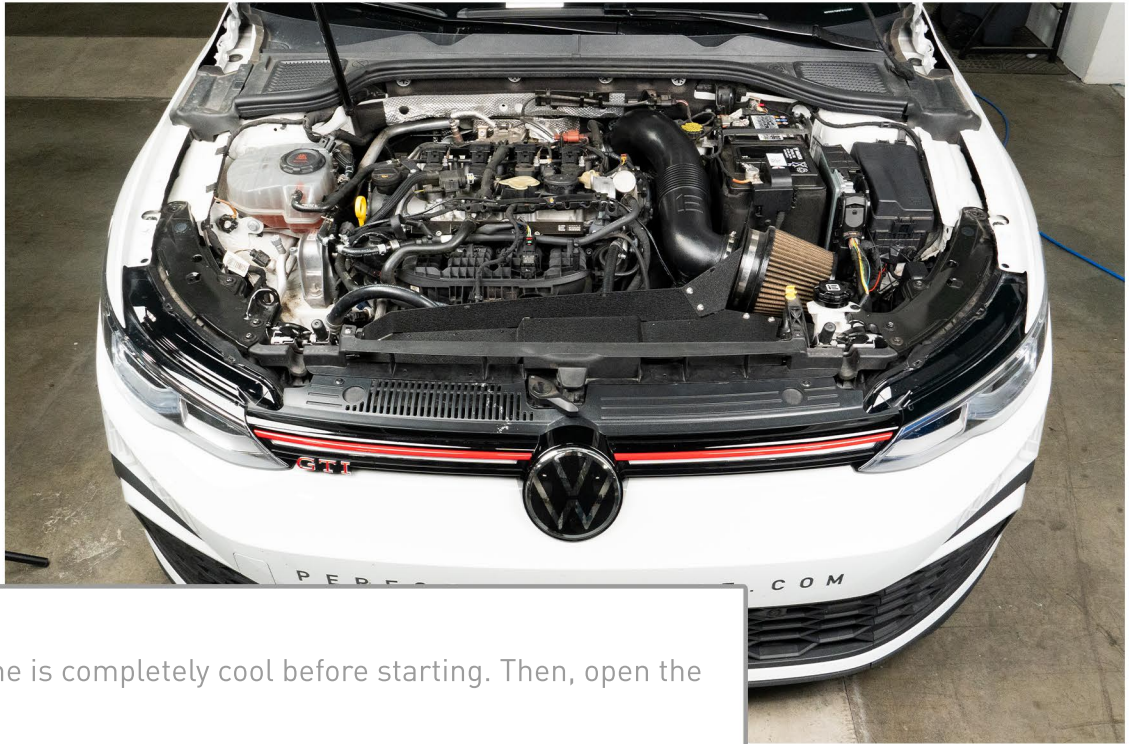

Ensure the engine is completely cool before starting. Then, open the hood.

02

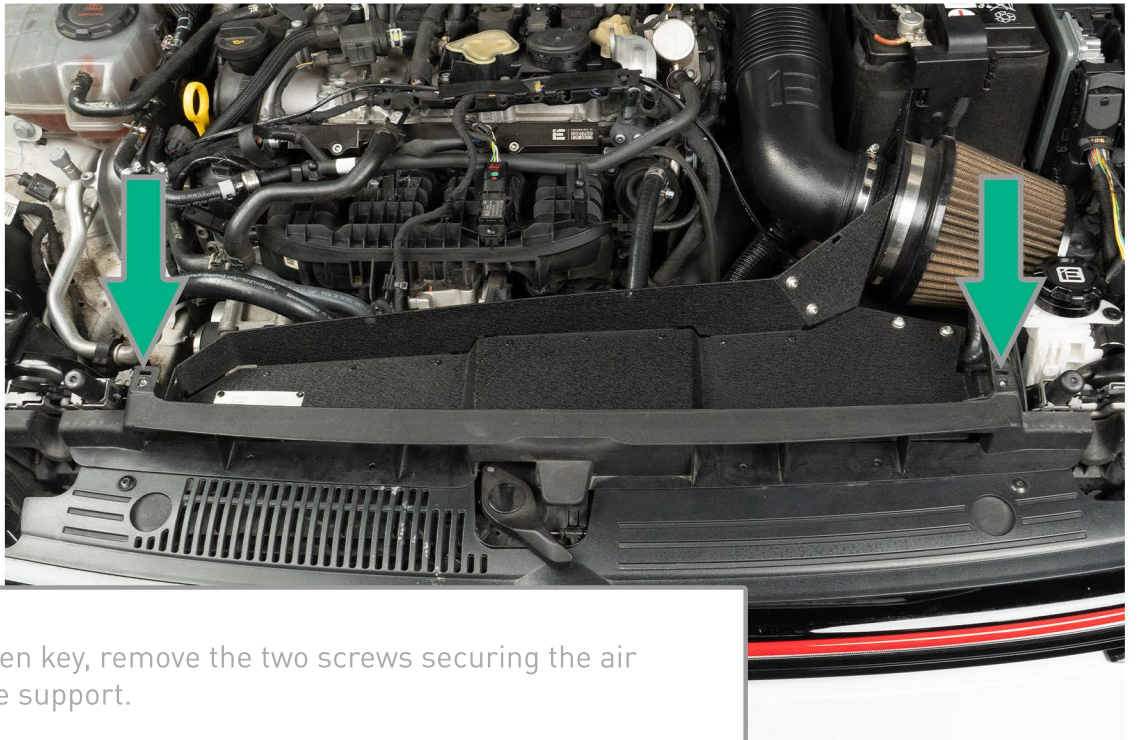

Using a 3mm Allen key, remove the two screws securing the air intake to the core support.




03



With both screws removed, lift the intake upward off the mounting tabs and slightly backward to access the large mounting hole on the right side of the intake mounting plate.


04

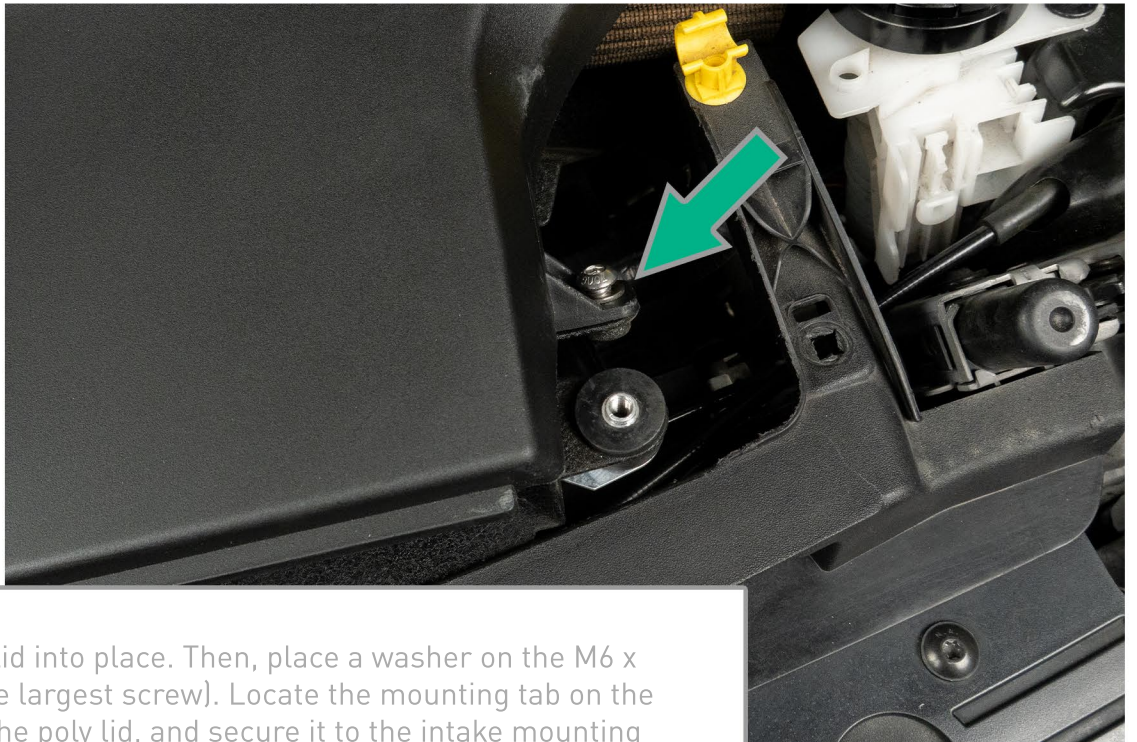

Lower the Poly Lid into place. Then, place a washer on the M6 x 12mm screw (the largest screw). Locate the mounting tab on the bottom right of the poly lid, and secure it to the intake mounting plate using a 4mm Allen key.




05

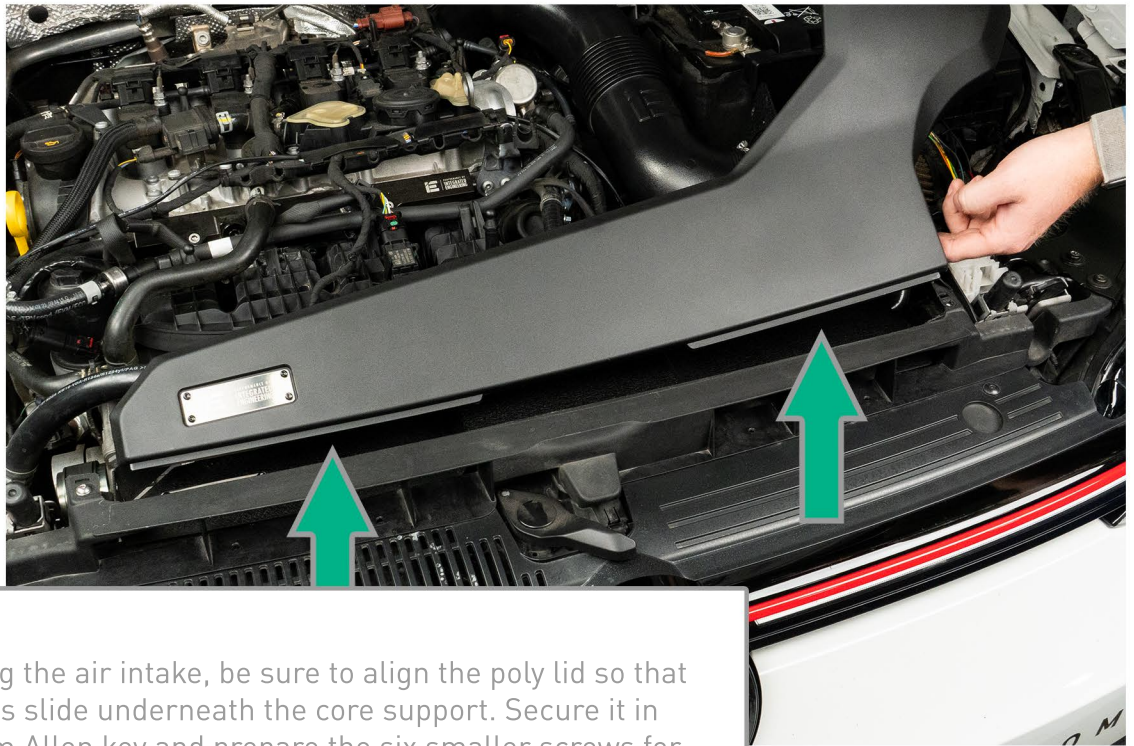

When reinstalling the air intake, be sure to align the poly lid so that the two lower lips slide underneath the core support. Secure it in place with a 3mm Allen key and prepare the six smaller screws for installation.


06

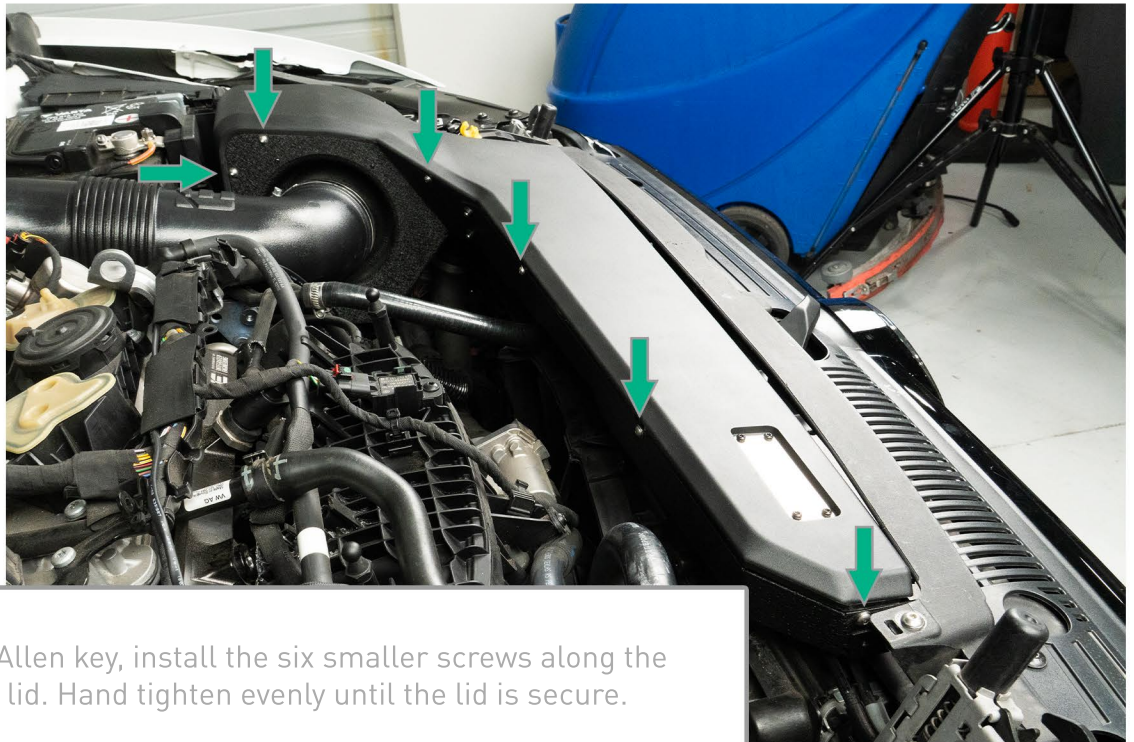

Using a 2.5 mm Allen key, install the six smaller screws along the back edge of the lid. Hand tighten evenly until the lid is secure.



07

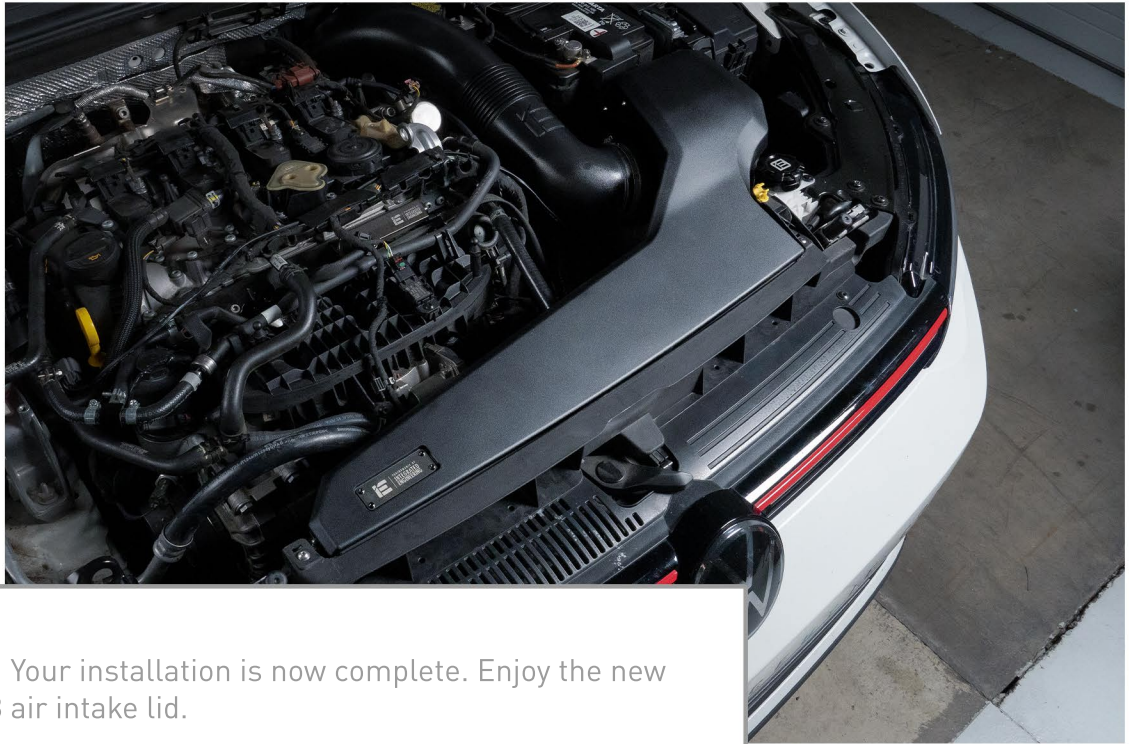


Congratulations! Your installation is now complete. Enjoy the new look of your MK8 air intake lid.



ENJOY!

Thank you for purchasing an Integrated Engineering product. We are dedicated to serving your performance needs. Please check our website frequently for new product releases. If you have any questions or concerns about this product please do not hesitate to contact us.

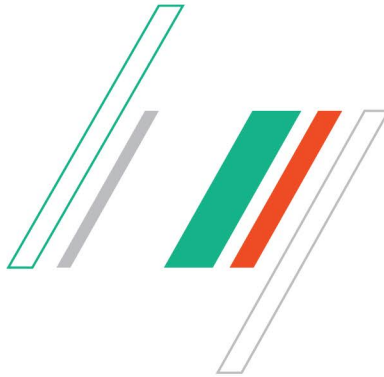

HOW WAS YOUR INSTALL?



Stoked?

Awesome! Please leave a review.
share.performancebyie.com



Bummed?

Sorry, let us make it right.
support.performancebyie.com



801.484.2021

WWW.PERFORMANCEBYIE.COM

SUPPORT@PERFORMANCEBYIE.COM



Brother owned since 2007.
Garage started for beer money.

performancebyie.com

Don't be shy. Share your project.



#LiveFastBuyFun