

PERFORMANCE BY



INSTALLATION GUIDE

IE REAR SWAYBAR FOR B9 S4, S5, RS5, A4, A5 / IE REAR SWAYBAR END LINKS
IESSCK1 & IESSCK5



This installation guide is for instructional purposes only. For best results, professional installation by an experienced technician is always recommended. By reading this guide you agree Integrated Engineering is not responsible for any damage or personal injury caused by incorrect installation.

DIFFICULTY



Expect 50 - 60 minutes on average

REQUIRED TOOLS

- 16mm Socket
- T25 driver
- 10mm socket
- 15mm socket
- M10 Triple Square
- 6mm allen
- 19mm wrench
- 14mm socket
- Exhaust hanger removal tool

BEFORE YOU BEGIN

It is highly recommended to pre-read this entire guide ahead of your installation to familiarize yourself with each step. Always park your vehicle in a safe and level location and allow plenty of time for the engine bay and exhaust to completely cool. Locate and prepare your work space with each required tool listed above. Unbox all components and verify the contents and quantities before you begin. If anything is missing or damaged, please contact us for immediate help at support@performancebyie.com

REQUIRED PARTS

- No additional parts are required for this install

OPTIONAL PARTS

- iE Adjustable Swayber End Links (IESSCK5)

SPECIAL NOTE:

This install guide has been photographed and written on a 2018 Audi A4. Some steps and factory hardware specifications may vary depending on vehicle model, year, and region. This guide is for reference purposes only. If you are unsure of the installation procedure for any individual step or part, please seek professional help before proceeding.




INCLUDED PARTS

- 01 - REAR SWAYBAR
- 03 - SWAY BAR BUSHING (2X)
- 04 - REAR SWAYBAR MOUNT (2X)
- 05 - REAR SWAYBAR MOUNTING PLATE (2X)
- 06 - M8 SCREW (4X)
- 07 - GREASE PACKET

Some items may be partially assembled.




01

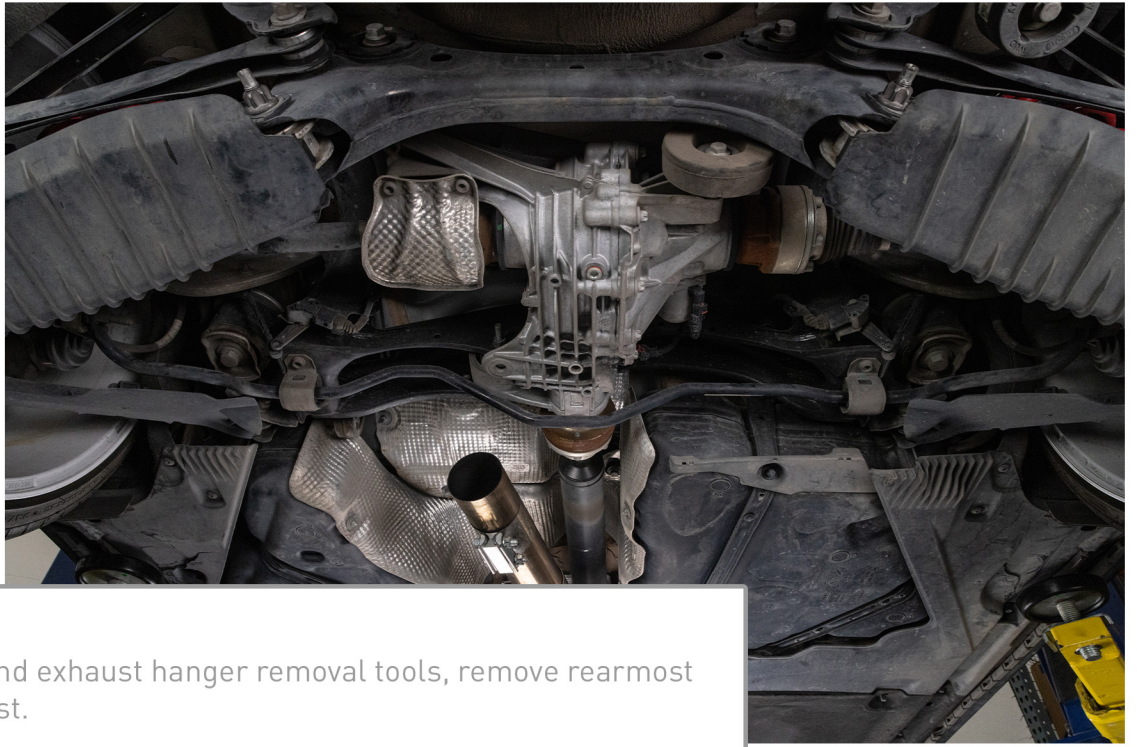

Using a 15mm and exhaust hanger removal tools, remove rearmost section of exhaust.


02

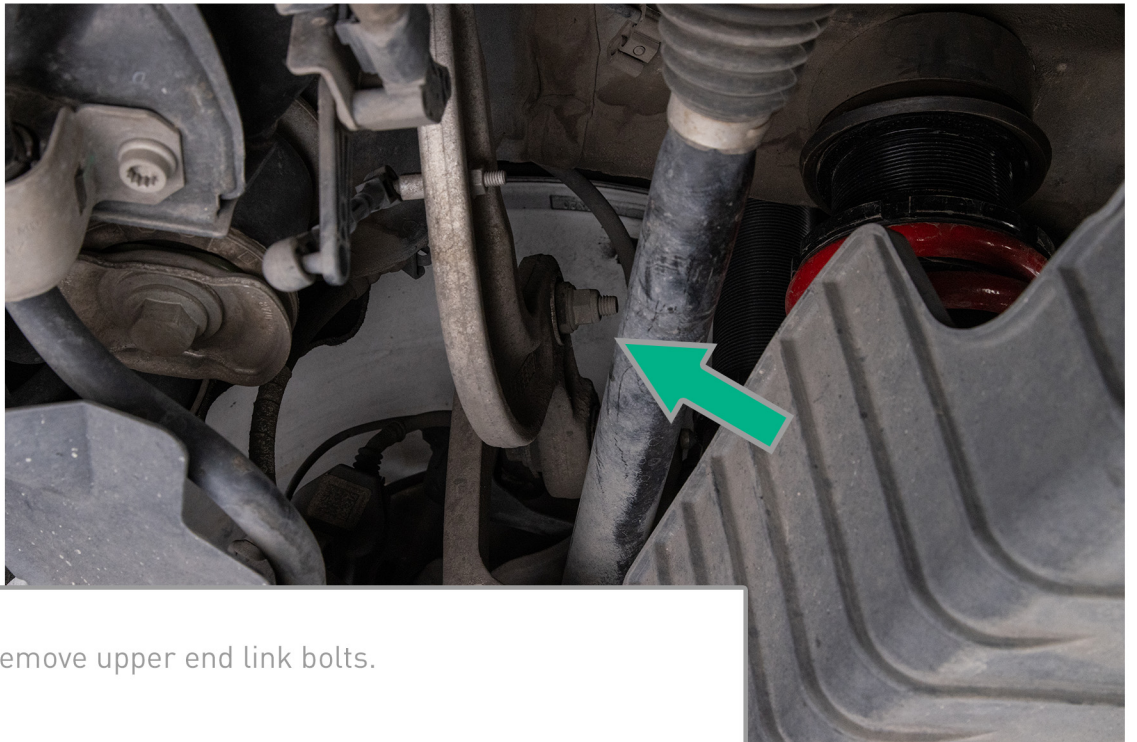

Using a 16mm, remove upper end link bolts.




03

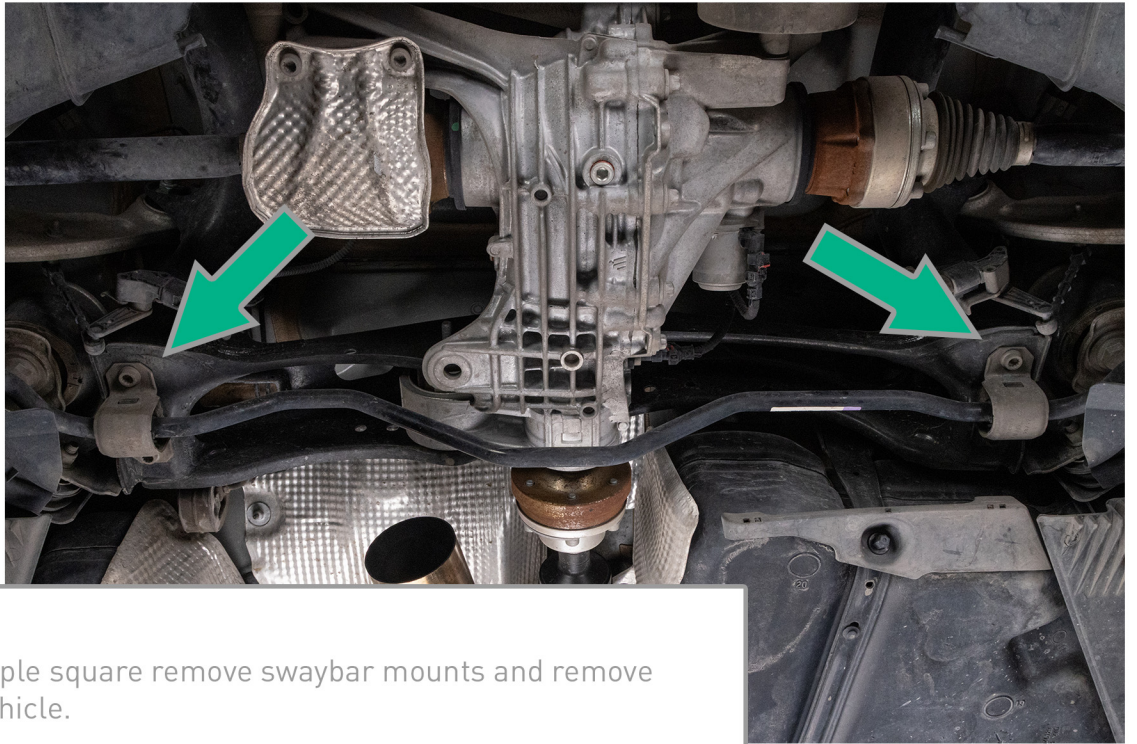

Using an m10 triple square remove swaybar mounts and remove swaybar from vehicle.


04

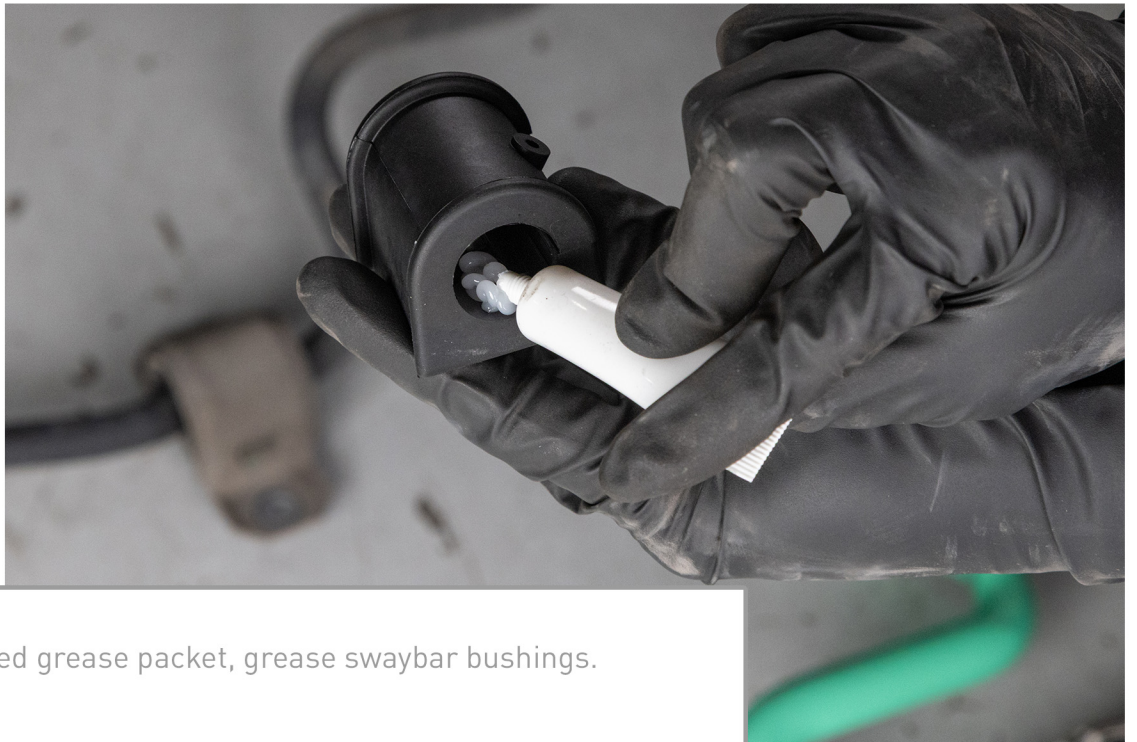

Using the included grease packet, grease swaybar bushings.



05

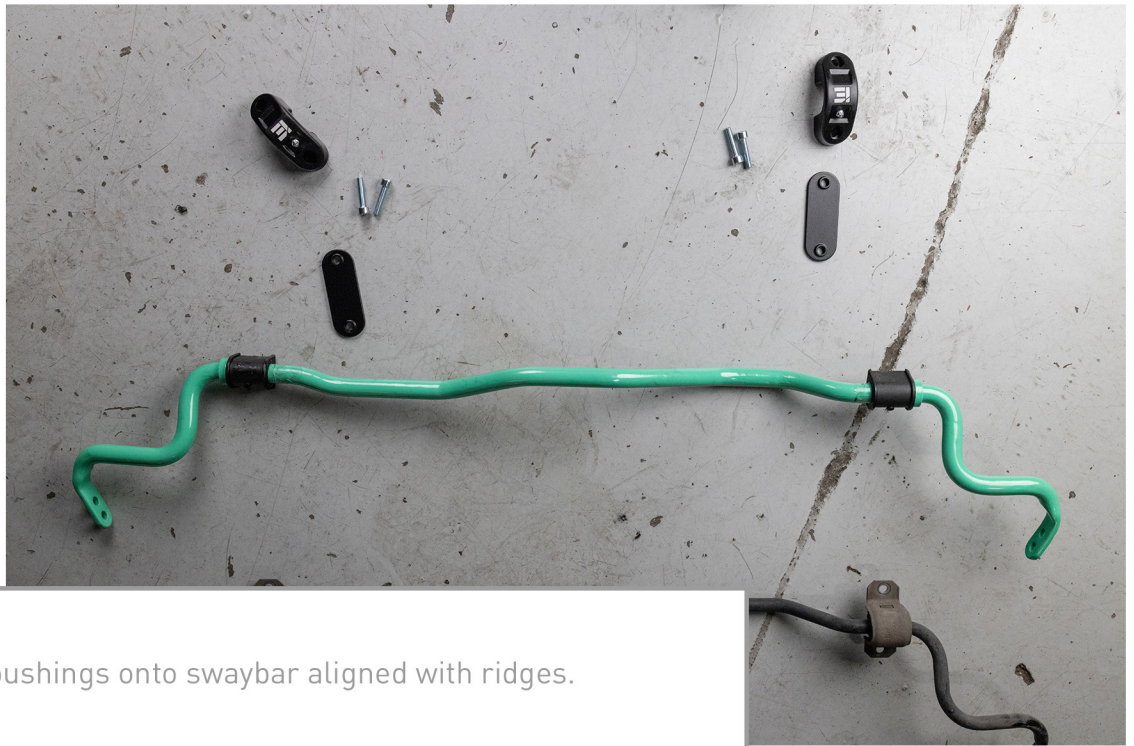

Install greased bushings onto swaybar aligned with ridges.

06



Install iE swaybar mounts onto previously installed bushings making sure to align grease fittings with holes in bushings. Sandwich bushing with swaybar mount backing plate and make sure ridges seat into swaybar mount.




07



Using the included M8 bolts, install swaybar mounts to factory mounting locations and tighten using a 6mm allen.

08

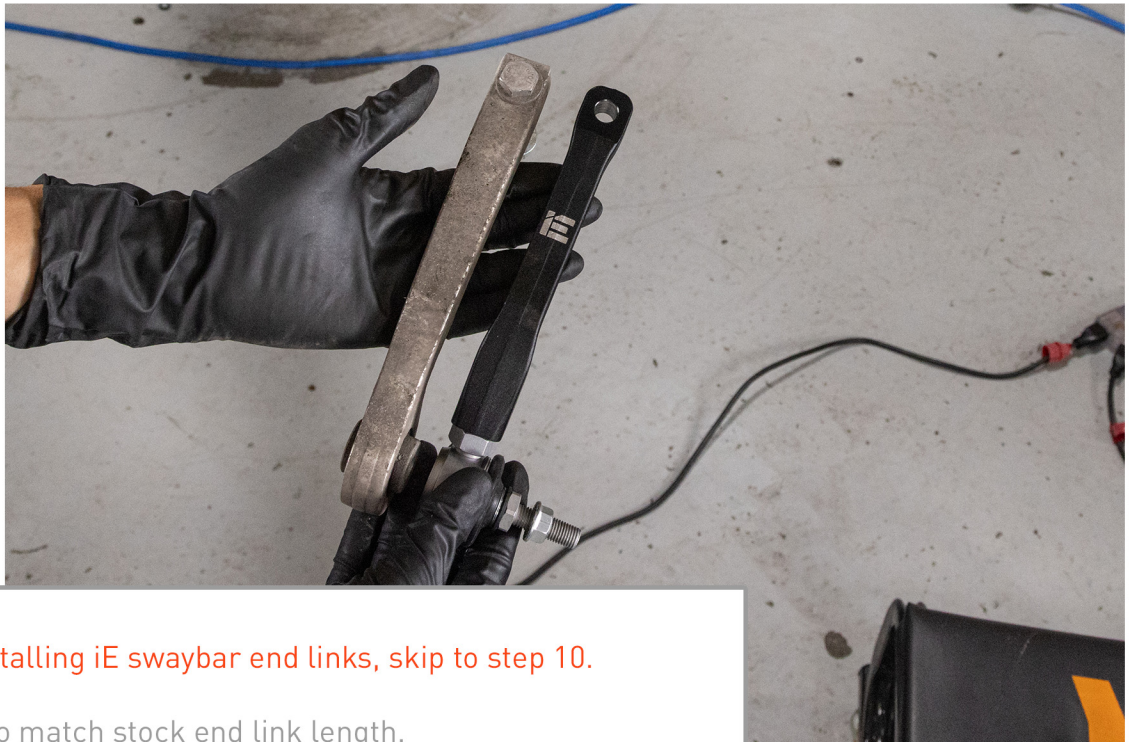


If you are not installing iE swaybar end links, skip to step 10.

Adjust end link to match stock end link length.



09

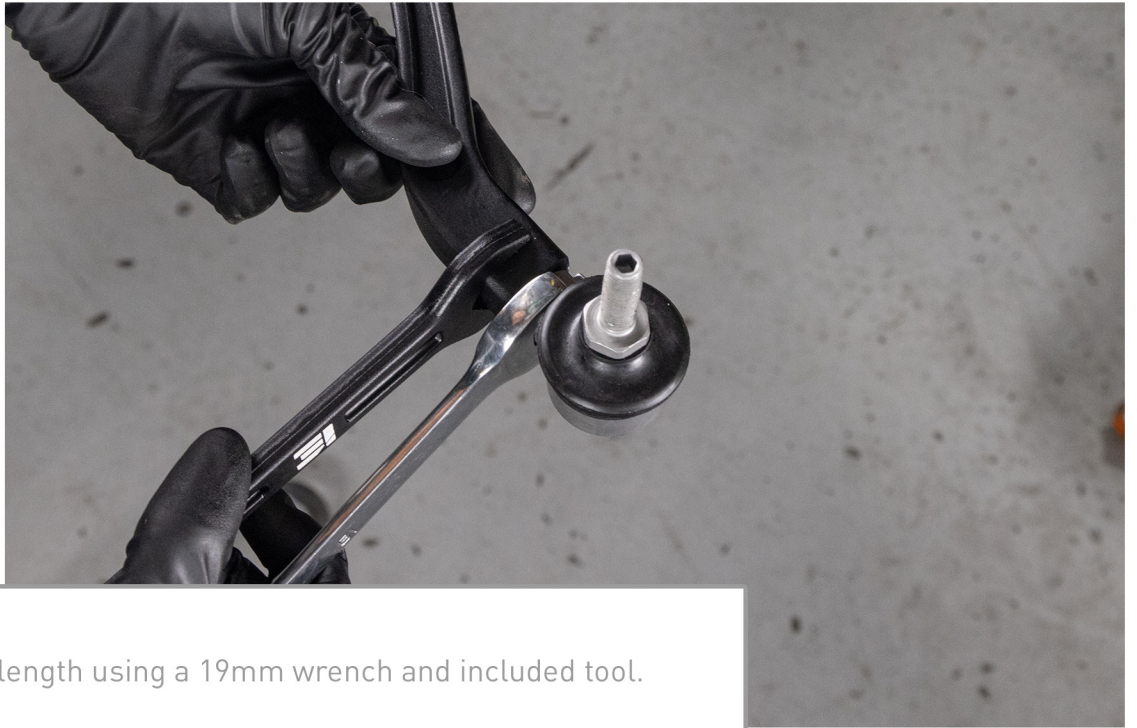

Lock in end link length using a 19mm wrench and included tool.

10



Using a 16mm for top bolt and 14mm for bottom, attach swaybar to end link and end link to stock mounting location. Reinstall rear section of exhaust.



ENJOY!

Thank you for purchasing an Integrated Engineering product. We are dedicated to serving your performance needs. Please check our website frequently for new product releases. If you have any questions or concerns about this product please do not hesitate to contact us.



HOW WAS YOUR INSTALL?



Stoked?

Awesome! Please leave a review.
share.performancebyie.com



Bummed?

Sorry, let us make it right.
support.performancebyie.com



801.484.2021

WWW.PERFORMANCEBYIE.COM

SUPPORT@PERFORMANCEBYIE.COM



Brother owned since 2007.
Garage started for beer money.
performancebyie.com

Don't be shy. [Share your project.](#)



[#LiveFastBuyFun](#)